

INSTRUCTIONS-CRICUT EASYPRESS 2

- Plug in the EasyPress 2.
- Find a firm, flat surface. Place the EasyPress Mat to protect your surface.
- Use the Quick Reference Chart to determine the settings for your project. The beep signals the heat press is ready to use.
- Place the Cricut EasyPress 2 on your fabric for 3-5 seconds to remove wrinkles and moisture.
- Place your design transfer/vinyl where you want it. Make sure the shiny side (clear liner) is facing up.
- Place the Cricut EasyPress 2 on your design. Start the timer by pressing the timer button.
- Hold the Cricut EasyPress 2 in place and apply gentle pressure until it beeps.
- Flip the object over and apply heat to the back side of your project/design for 10 - 15 seconds.
- Let the iron-on film cool completely before you test a corner. If the film does not lift easily, reapply and reheat a few more seconds.



CRICUT EASYPRESS

Heat Settings

Material	Foil	Lite/Metallic	Glitter	Holographic
100% Cotton	145° C 35 sec	150° C 30 Sec	170° C 20 Sec	165° C 20 sec
Cotton/Poly Blend	140° C 30 sec	150° C 20 Sec	160° C 15 Sec	165° C 30 sec
100% Polyester	130° C 30 sec	140° C 15 Sec	130° C 20 Sec	140° C 30 sec
Nylon blend	125° C 30 sec	130° C 30 Sec	130° C 20 Sec	135° C 20 sec
Silk	125° C 30 sec	125° C 25 Sec	135° C 30 Sec	135° C 25 sec
Jersey Mesh	135° C 20 sec	140° C 20 Sec	140° C 20 Sec	140° C 20 sec
Cotton Canvas	130° C 40 sec	130° C 40 Sec	130° C 40 Sec	135° C 40 sec
100% Wool felt	135° C 20 sec	135° C 20 Sec	140° C 20 Sec	140° C 20 sec

Warning:
 Heat Presses operate at high temperatures that can cause burns or other injury. Use with extreme caution. **CAUTION: Risk of electric shock. Do not open, modify, or otherwise tamper with press. Always turn press OFF before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect press from the electrical outlet; instead, grasp the plug and pull to disconnect press. Do not immerse in water or use in wet conditions**